

BAF VORTAC	APP CRS	Rwy Idg
113.0	208°	8919
Chan 77		TDZE 270
		Apt Elev 270

VOR RWY 20
WESTFIELD-BARNES RGNL (BAF')

V

A

-21°C



For inoperative MALSR, increase Cat A/B visibility to RVR 5000. Night landing: Rwy 15 NA.

MALSR

A5

MISSED APPROACH: Climb to 1200, then climbing right turn to 4000 direct CTR VOR/DME and hold, continue climb in hold to 4000.

ATIS	BRADLEY APP CON	WESTFIELD TOWER*	GND CON	CLNC DEL
127.1 263.15	125.35 281.5	118.9 (CTAF) 251.1	121.7 289.4	121.7

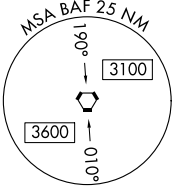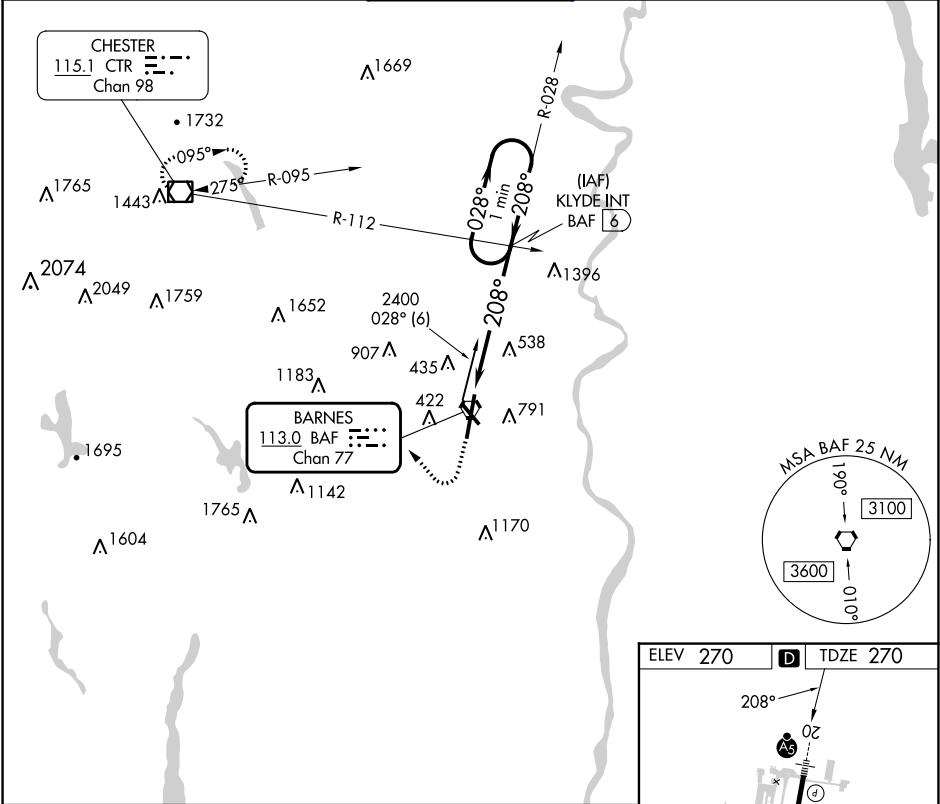

ELEV 270

D TDZE 270