

VORTAC BRO	APP CRS	Rwy Idg	7257
116.3	311°	TDZE	36
Chan 110		Apt Elev	36

VOR/DME Y or TACAN RWY 31

VALLEY INTL (HRL)

▼

▲



When local altimeter setting not received, use Port Isabel altimeter setting and increase all MDA 60 feet.

MALS

AS

MISSED APPROACH: Climbing right turn to 2000 via BRO R-311 to ZOCKE/12 DME and hold.

ATIS	VALLEY APP CON	HARLINGEN TOWER ★	GND CON	UNICOM
124.85	120.7 279.5	119.3 (CTAF) 317.6	121.7	122.95

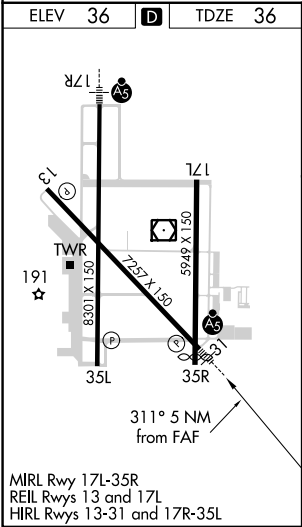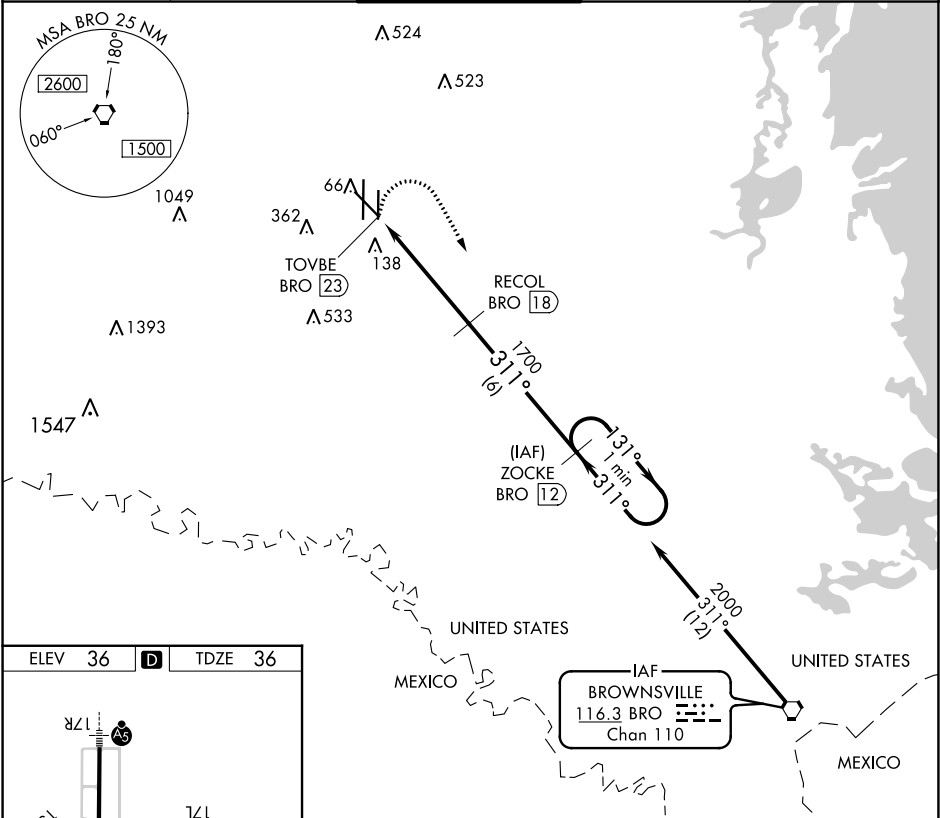

2000	ZOCKE BRO 12	ZOCKE BRO 12	One Minute Holding Pattern	
BRO R-311	TOVBE BRO 23	RECOL BRO 18	131°	2000
			311°	
			1700	
			3.03°	
			TCH 55	
			5 NM	6 NM
CATEGORY	A	B	C	D
S-31	1000-1¼ 964 (1000-1¼)	1000-1½ 964 (1000-1½)	1000-3	964 (1000-3)
CIRCLING	1000-1¼ 964 (1000-1¼)	1000-1½ 964 (1000-1½)	1000-3	964 (1000-3)