

LOC I-SPW <u>110.9</u>	APP CRS 121°	Rwy Idg TDZE Apt Elev	6001 1339 1339
----------------------------------	------------------------	-----------------------------	---

ILS or LOC RWY 12


ADF or DME required.

▼ For inop ALS, increase S-LOC 12 Cats C and D visibility to 1½ SM.
▲ **NA** When local altimeter setting not received, use Estherville altimeter setting and increase S-ILS 12 DA to 1599 feet; increase all MDAs 60 feet and S-LOC 12 visibility Cat C/D ½ SM, and Circling visibility Cat C/D ¼ SM.
 For inop ALS, when using Estherville altimeter setting, increase S-LOC 12 Cats C and D visibility to 1½ SM.

MALSR

MISSED APPROACH: Climb to 3500 then right turn direct SPW VOR/DME then on SPW VOR/DME R-302 to SNORE LOM/SPW VOR/DME 7 DME and hold.

ASOS 126.625	MINNEAPOLIS CENTER 127.75 257.7	UNICOM 123.0 (CTAF) U
-----------------	------------------------------------	---------------------------------

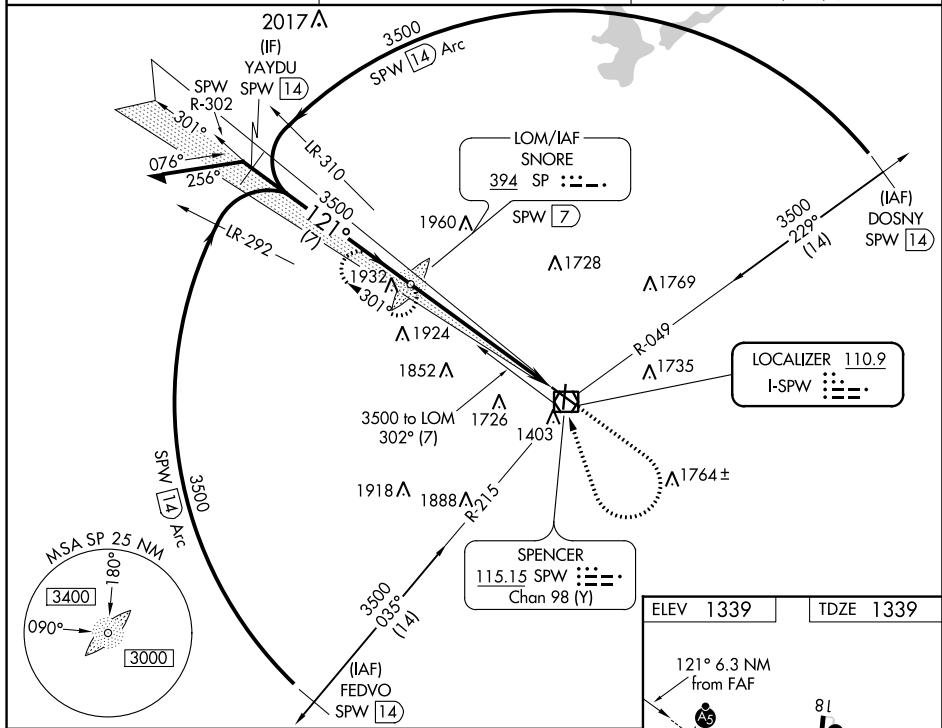

Remain within 10 NM

SNORE
SP LOM
SPW 7

3500

301°

3412

121°

3500

GS 3.00°
TCH 53

6.3 NM

3500


SPW R-302

SP

VGSI and ILS glidepath not coincident
(VGSI Angle 3.00°/TCH 45).

SPW 0.7

CATEGORY	A	B	C	D
S-ILS 12	1539-½ 200 (200-½)			
S-LOC 12	1900-½	561 (600-½)	1900-1¼	561 (600-1¼)
C CIRCLING	1900-1	561 (600-1)	2100-2¼ 761 (800-2¼)	2100-2½ 761 (800-2½)

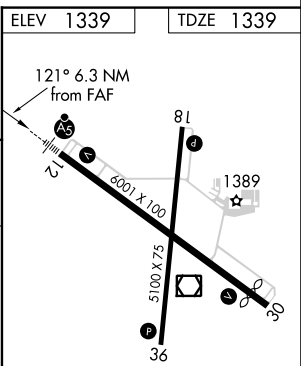

SPENCER, IOWA
Amdt 2C 24MAR22

43°10'N-95°12'W

SPENCER MUNI (SPW)
ILS or LOC RWY 12

REIL Rwy's 18, 30 and 36 L					
MIRL Rwy's 12-30 and 18-36 L					
FAF to MAP 6.3 NM					
Knots	60	90	120	150	180
Min:Sec	6:18	4:12	3:09	2:31	2:06